


# LeftyLite

## FEATURES

Destination: X-Country, Enduro use.  
Compatibility: Lefty forks.

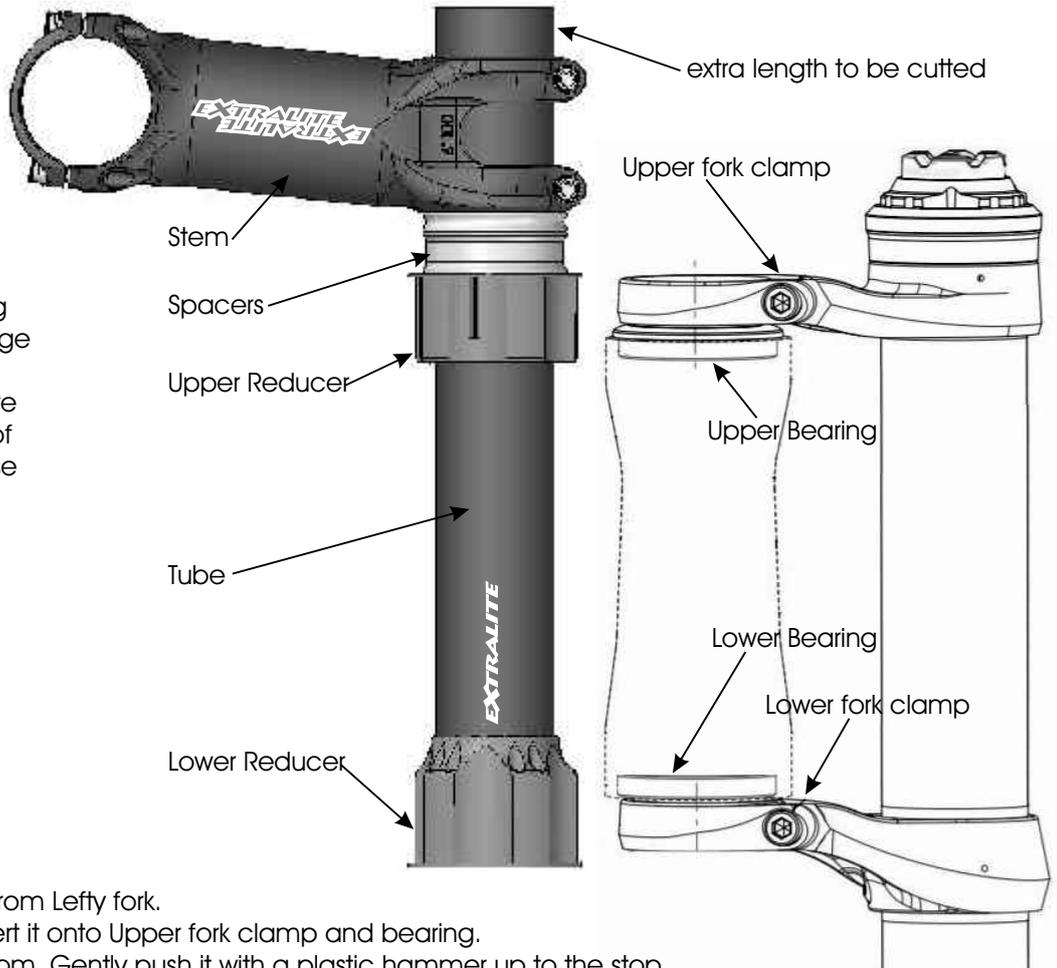

## PREPARATION

Check your stem and round any sharp edge in the internal clamping area. Any sharp edge could damage the fibers of the steer tube. You can cut the LeftyLite tube before the installation copying the length of original Cannondale tube. Otherwise cut the tube once installed at the desired length, as described at the end of the installation process.

## INSTALLATION

- 1) Grease bearing contact areas.
- 2) Remove the original head tube from Lefty fork.
- 3) Remove Upper Reducer and insert it onto Upper fork clamp and bearing.
- 4) Insert LeftyLite tube from the bottom. Gently push it with a plastic hammer up to the stop.
- 5) Tighten the bottom fork clamp (7-9 Nm).
- 6) With the plastic mallet hammer gently tap the Upper fork clamp and Reducer in downward direction to adjust the bearing. Tighten the top fork clamp (7-9 Nm).
- 7) Insert (optional) spacers to adjust stem height, insert stem.
- 8) Mark a line on steer tube after having properly pre-assembled fork, headset, spacers and stem.
- 9) Remove fork and cut steer tube 2-3mm below line marking. After cutting remove all sharp edges from inside and outside the tube.
- 10) Do not apply grease to the stem grip area. Tight stem bolts (max 5 Nm)

Tel: +39-0371-203059  
info@extralite.com

**EXTRALITE**