

CyberFront SL-B / SP-B Adaptor T-Line


INFORMATION AND COMPATIBILITY

This kit converts CyberFront SL-B and SP-B C/P-Line models into Brompton folding bikes T-Line compatible model.

To secure the Adaptor Nut and complete the installation you'll need a M5x0.8 steel bolt and two-component glue or Loctite 638 / Loxeal 83.21

INSTALLATION

- Extract Left Axle End
- Take a M5x0.8 steel bolt, grease its thread and right it into Adaptor Nut internal thread
- Spread two-component glue or Loctite 638 / Loxeal 83.21 onto Adaptor Nut external thread and into Axle internal thread
- Hold the Axle with a 10mm closed polygonal wrench. Tight Adaptor Nut into CyberFront Axle from left side using the M5x0.8 bolt for tightening
- Remove M5x0.8 bolt and let the glue/Loctite dry

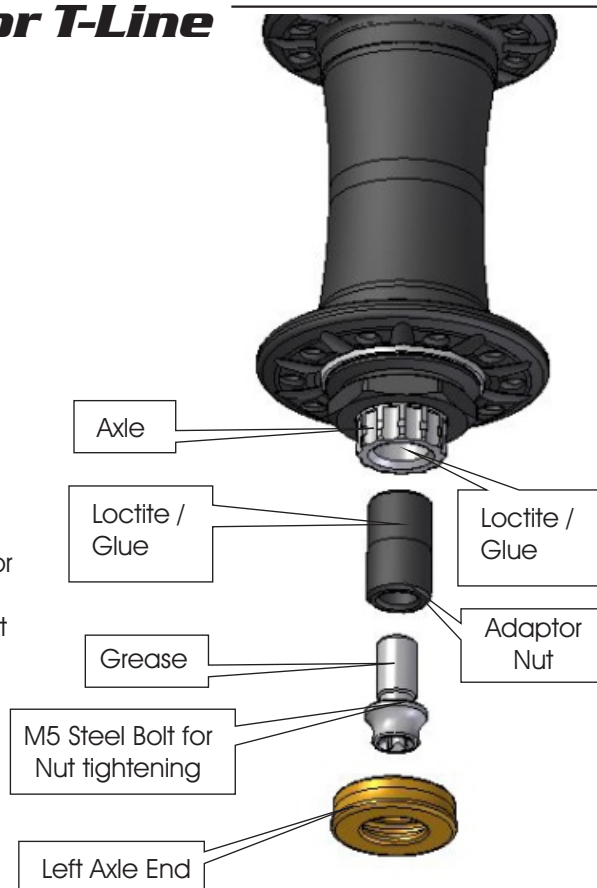

CyberFront features the special B-Lock system to secure the wheel to the frame saving the weight of the Quick release. Left side B-Lock bolt pass through the fork and the original T-Line fork hook. Tighten B-Lock left bolt at 6Nm and B-Lock front bolt at 10Nm.

Keep original T-Line hook

